



TAS-4000

ORDERCODE D4194



SHOWELECTRONICS FOR PROFESSIONALS

Congratulations!

You have bought a great, innovative product from DAP Audio.

The DAP Audio TAS series bring excitement to any venue. Whether you want simple plug-&-play action or a sophisticated show, this product provides the effect you need.

You can rely on DAP Audio, for more excellent audio products.

We design and manufacture professional audio equipment for the entertainment industry.

New products are being launched regularly. We work hard to keep you, our customer, satisfied.

You can get some of the best quality, best priced products on the market from DAP Audio.

So next time, turn to DAP Audio for more great audio equipment.

Always get the best -- with DAP Audio !

Thank you!



Warning..... 2

 Safety-instructions..... 2

 Operating Determinations..... 3

Description..... 4

 Features..... 5

 Overview Front panel..... 5

 Overview Back panel..... 6

Operation..... 7

Mode selection..... 7

Connection Cables..... 10

Maintenance..... 11

Troubleshooting..... 11

Product Specifications..... 12

Appendix 1: TAS block diagram..... 13

Appendix 2: Wire Gauge Charts..... 14

WARNING



CAUTION!

Keep this system away from rain and moisture!



**FOR YOUR OWN SAFETY, PLEASE READ THIS USER MANUAL CAREFULLY
BEFORE YOUR INITIAL START-UP!**

SAFETY INSTRUCTIONS

Every person involved with the installation, operation and maintenance of this system have to:

- be qualified
- follow the instructions of this manual



**CAUTION! Be careful with your operations.
With a dangerous voltage you can suffer
a dangerous electric shock when touching the wires!**



Before you initial start-up, please make sure that there is no damage caused by transportation. Should there be any, consult your dealer and do not use the system.

To maintain perfect condition and to ensure a safe operation, it is absolutely necessary for the user to follow the safety instructions and warning notes written in this manual.

Please consider that damages caused by manual modifications to the system are not subject to warranty.

This system contains no user-serviceable parts. Refer servicing to qualified technicians only.

IMPORTANT:

The manufacturer will not accept liability for any resulting damages caused by the non-observance of this manual or any unauthorized modification to the system.

- Never let the power-cord come into contact with other cables! Handle the power-cord and all connections with the mains with particular caution!
- Never remove warning or informative labels from the unit.
- Never use anything to cover the ground contact.
- Do not insert objects into air vents.
- Do not connect this system to a dimmerpack.
- Do not switch the system on and off in short intervals, as this would reduce the system's life.
- Do not open the device and do not modify the device.
- Do not open this device. Risk: hazardous radiation exposure.
- Only use system indoor, avoid contact with water or other liquids.
- Avoid flames and do not put close to flammable liquids or gases.
- Always disconnect power from the mains, when system is not used. Only handle the power-cord by the plug. Never pull out the plug by tugging the power-cord.
- Make sure you don't use the wrong kind of cables or defective cables.
- Make sure that the signals into the mixer are balanced, otherwise hum could be created.
- Make sure you use DI boxes to balance unbalanced signals; All incoming signals should be clear.
- Make sure that the available voltage is not higher than stated on the rear panel.

- Make sure that the power-cord is never crimped or damaged. Check the system and the power-cord from time to time.
- Make sure that the amplifier is turned down, before turning the power on or off. So you can avoid supersonic frequencies, which could damage your speakers.
- Don't put your equipment next to TV, radio, etc., because of interference or distortion.
- If you connect other parts of the system, be careful of ground loops.
- The best way to avoid ground loops is connecting the electrical system ground to one central point ("star" system). In this case the mixer can act as a central point.
- Before changing the ground, always turn off your amplifier.
- Please read this manual carefully and keep it for future reference. Remember that the amplifier has a better value on the market, if you save the carton and all packing materials.
- Always operate the unit with the AC ground wire connected to the electrical system ground.
- Connecting amplifier outputs to oscilloscopes or other test equipment, while the amplifier is in bridged mode, may damage both the amplifier and test equipment.
- Do not drive the inputs with a signal level bigger, than required to drive the equipment to full output.
- In system setup, the amplifier's output power must be 50%-100% more than the loaded loudspeakers rated power.
- Please turn off the power switch, when changing the power cord or signal cable, or select the input mode switch.
- In typical use, please set the volume at 0dB position.
- Sometimes, when you want to send one signal to more than one amplifier, you should use a signal distributor.
- If your Dap Audio device fails to work properly, discontinue use immediately. Pack the unit securely (preferably in the original packing material), and return it to your Dap Audio dealer for service.
- Allow time to cool down, before cleaning or servicing.
- For replacement use fuses of same type and rating only.
- Prevent distortion! Make sure that all components connected to the device have sufficient power ratings. Otherwise distortion will be generated because the components are operated at their limits.
- Avoid ground loops! Always be sure to connect the power amps and the mixing console to the same electrical circuit to ensure the same phase!
- If system is dropped or struck, disconnect mains power supply immediately. Have a qualified engineer inspect for safety before operating.
- If the system has been exposed to drastic temperature fluctuation (e.g. after transportation), do not switch it on immediately. The arising condensation water might damage your system. Leave the system switched off until it has reached room temperature.
- This device falls under protection class I. Therefore it is essential to connect the yellow/green conductor to earth.
- Repairs, servicing and electric connection must be carried out by a qualified technician.
- WARRANTY: Till one year after date of purchase.

OPERATING DETERMINATIONS

If this system is operated in any other way, than the one described in this manual, the product may suffer damages and the warranty becomes void.

Any other operation may lead to dangers like short-circuit, burns, electric shock, etc.

You endanger your own safety and the safety of others!

Improper installation can cause serious damage to people and property !

Description of the device

Features

The TAS-1100, TAS-1500, TAS-1900, TAS-2400, TAS4000 are professional high-end amplifiers :

- Power rating

	2Ω	4Ω	8Ω
TAS-1100	Not allowed	RMS 2 X 550W	RMS 2 X 300W
TAS-1500	RMS 2 X 1200W	RMS 2 X 750W	RMS 2 X 450W
TAS-1900	RMS 2 X 1500W	RMS 2 X 950W	RMS 2 X 580W
TAS-2400	RMS 2 X 1800W	RMS 2 X 1200W	RMS 2 X 700W
TAS-4000	Not allowed	RMS 2 X 2000W	RMS 2 X 1200W

- Features: Clip limiting
Thermal protection
VHF protection
Short circuit protection
DC voltage protection
Zero current protection
Zero impact protection
Highpass filter: 30Hz
- Crosstalk 20Hz~20KHz, 8 Ohm: >60dB
- Frequency response: 20Hz~20KHz
- Sensitivity 8 Ohm stereo 1KHz: 1V
- S/N Ratio: >80 dB
- Damping Factor: >300
- Slewrate: >20V/uSec
- Total Harmonic distortion (THD): <0,05%
- Mode: Stereo/Parallel/Bridge
- Airflow: From front to rear
- Input connector: XLR
- Output connector: Speakon



Fig. 1

Frontpanel

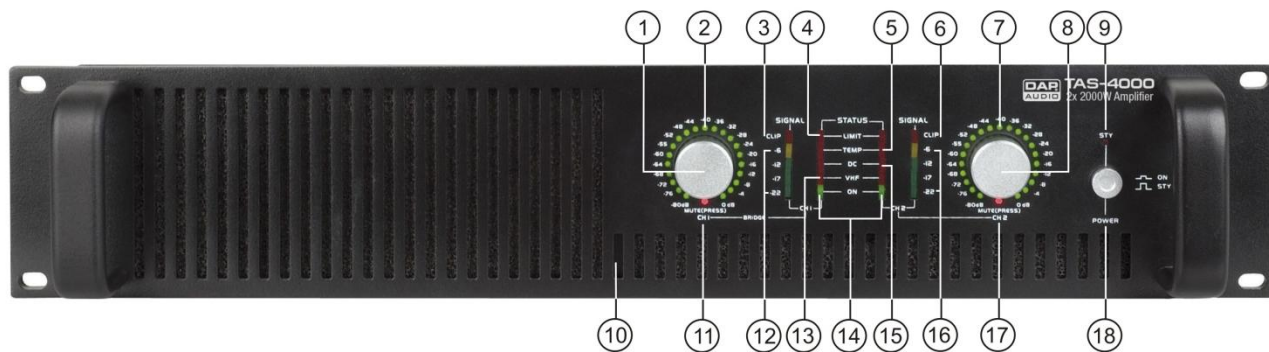


Fig. 2

1. Channel 1 Input Attenuator.

Use to attenuate the input signal of channel 1. Pressing the control for 2 seconds mutes Channel 1.

2. Channel 1 volume scale indicator.

This indicator displays the volume attenuation of Channel 1.

3. Channel 1 clip LED.

Illuminates at the clipping threshold, Continuous illumination also indicates that ACL (Active Clip Limiting) protection circuitry is engaged.

4. Channel 1/2 Limit LEDs.

Indicate that the ACL (Active Clip Limiting) protection circuitry is limiting the input signal to protect the speakers from damage caused by a clipping amplifier.

5. Channel 1/2 TEMP LEDs.

These LEDs will light if the temperature of CH1 or CH2 exceeds 95°C.

6. Channel 2 clip LED.

Illuminates at the clipping threshold, Continuous illumination also indicates that ACL (Active Clip Limiting) protection circuitry is engaged,

7. Channel 2 volume scale indicator.

This indicator displays the volume attenuation of Channel 2.

8. Channel 2 Input Attenuator.

Use to attenuate the input signal of channel 2. Pressing the control for 2 seconds mutes Channel 2.

9. Power LED.

Indicates that AC power is connected and the amplifier is turned on.

10. Air entrance.

TAS Series amplifiers are cooled by two, rear-mounted fans, Cool air flows over the heat sinks and exhausts through the rear grills, Make sure these outlets remain clear to allow unrestricted air flow.

11. Channel 1 Mute LED.

If channel 1 is muted, the LED will light.

12. Channel 1 output level indicator.

Indication range: -22dB to +6dB.

13. Channel 1/2 VHF LEDs.

Indicates that channel 1 or 2 are in VHF protection mode.

14. Channel 1/2 ON LEDs.

Indicate that channel 1 or 2 are active.

15. Channel 1/2 DC LEDs.

Indicate that channel 1 or 2 are in protection mode.

16. Channel 2 output level indicator.

Indication range: -22dB to +6dB.

17. Channel 1 Mute LED.

If channel 2 is muted, the LED will light.

18. AC Power Switch.

This is the main Power switch. Press to turn the amplifier on.

Backpanel

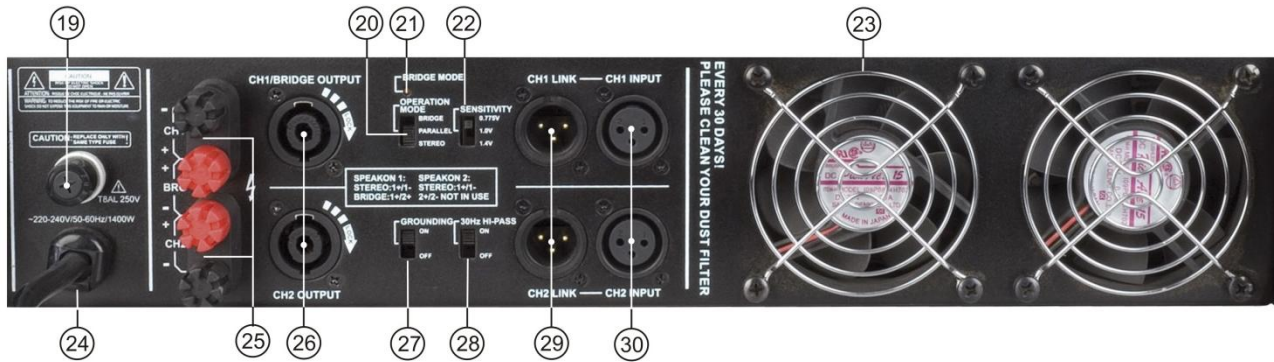


Fig. 3

19. Power Fuse.

Replace the fuse only by a fuse of the same type.

20. Mode Selection Switch.

This recessed, three-position switch configures the amplifier for Stereo, Parallel or Bridged Mono Mode operation. Amplifiers are factory configured for Stereo Mode. See the section on Mode Selection for more information.

21. Bridge Mode LED.

Indicates that the amplifier is working in bridge mode.

22. Input Sensitivity Selector.

This selector allows you, to choose the input sensitivity: 0,775V, 1,0V or 1,4V.

23. Air cooling windows

Make sure these outlets remain clear to allow unrestricted air flow.

24. Mains Cord

Connect to the mains.

25. Output terminal Connectors.

Using speaker cables, make connections to both the channel A and channel B connectors for Stereo or Parallel mode, use the red terminals only for Bridged mono mode.

26. Output Speakon Connectors.

Use either the speakon connectors or the terminals. Using the speakon connectors, make connections to both the channel A and channel B connectors for Stereo or Parallel mode, use only the channel A connector for Bridged mono mode. Using the terminals, make connections to both the channel A and channel B terminals for Stereo or Parallel mode, In bridged mono mode use only the red terminals. For more information see page 8 and 9.

27. Grounding Switch.

To eliminate groundloops, put the selector in "OFF" position.

28. 30Hz High pass filter select.

This switch is used to cut the low frequencies under 30Hz.

29. Balanced XLR Input Connectors.

These connectors accept input signals on XLR input plugs, See the section on connecting cables on page 10/11 for information on polarity, Connectors for each channel are in parallel, The unused connectors may be used for linking to other amplifiers.

30. Balanced Link Out connectors.

Used to Link the input signals to other amplifiers.

Operation

Installation

Remove all packing materials from the DSA. Check that all foam and plastic padding is removed. Secure the equipment into a 19" rack. Connect all cables.

Connecting Power / Circuit Size Requirements.

The actual current draw, the amplifier demands from the AC mains, depends on many factors (its load, output level or the crest factor of its program material).

The power requirement is rated under typical music conditions, with both channels driven so those peaks are just at the clipping point.

Make sure the mains voltage is correct and is the same as printed on the rear of the amplifier. Damage caused by connecting the amplifier to improper AC voltage is not covered by any warranty. Unless otherwise specified when ordered. DAP audio amplifiers shipped to customers are configured as follows:

North America 120VAC/60Hz

Europe 230VAC/50Hz

Asia 220VAC /50Hz/60Hz

Australia 240VAC/50Hz

South America 120VAC/60Hz or 220VAC/50Hz

Japan 100VAC/50Hz

NOTE: Always turn off and disconnect the amplifier from mains voltage before making audio connections. Also, as an extra precaution, have the attenuators turned down during power-up.

Connecting Inputs.

Use the XLR input connectors on the rear to supply audio signals to your DAP Audio TAS Series amplifier. The connectors accept balanced and unbalanced audio connections. (The TAS Series amplifiers are configured standard with "Pin 2 hot" on XLR inputs. The Link connector can be used to loop the audio Input to another amplifier Input. For more Information, see the section on Connection cables page 10.

Connecting Outputs.

Speakers are connected using Speakon connectors. For examples see figures 4, 5 and 6.

Mode Selection

The three-position, recessed Mode Select switch (located on the rear panel) configures the amplifier for either Stereo, Parallel or Bridged Mono Mode. Amplifiers are factory-configured for Stereo Mode.

Stereo Mode

In Stereo Mode, both channels operate independently, with their input attenuators controlling their respective levels. Signal at Channel A's input produces output at Channel A's output while signal at Channel B's input produces output at Channel B's output.

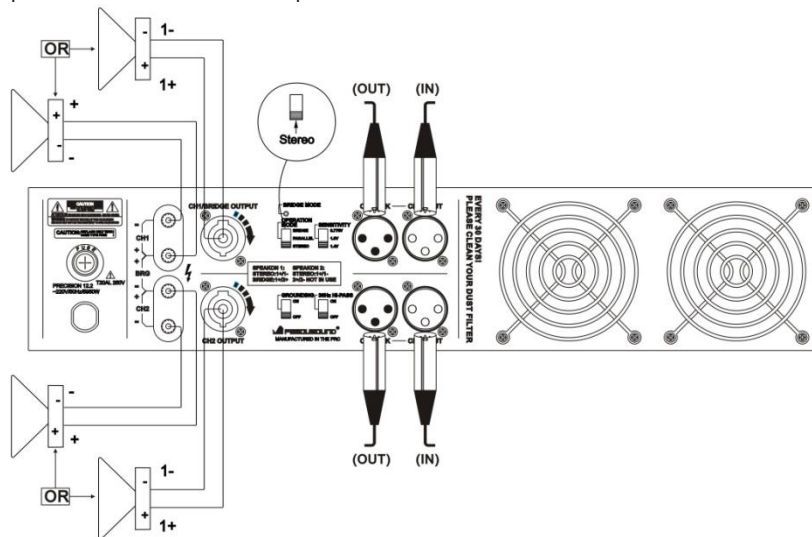


Fig. 4

Important !!!

Absolute minimum nominal load Impedance for stereo operation is:

TAS1100 and TAS4000:

4 Ohm per channel.

TAS1500, TAS1900 and TAS2400:

2 Ohm per channel.

Parallel Mode

When set to Parallel Mode, a signal applied to Channel A's input will be amplified and appear at outputs of both Channels A&B.

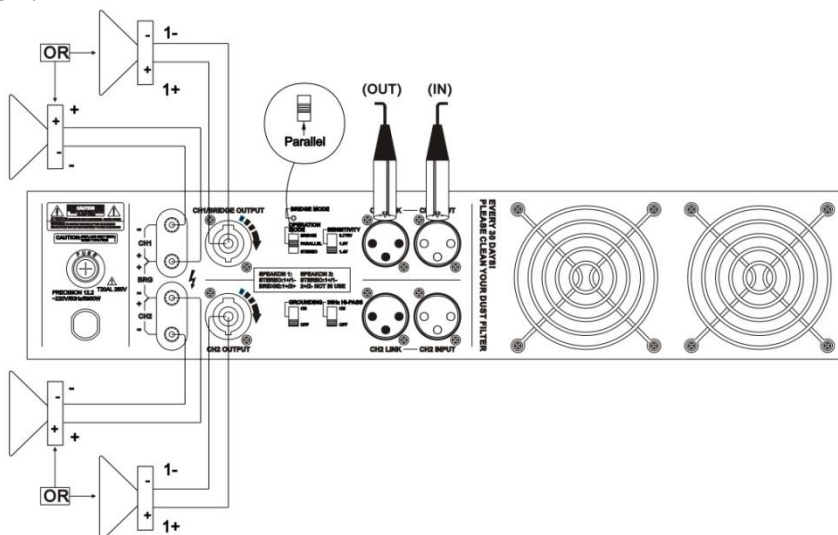


Fig. 5

Important !!!

Absolute minimum nominal load Impedance for parallel operation is:

TAS1100 and TAS4000:

4 Ohm per channel.

TAS1500, TAS1900 and TAS2400:

2 Ohm per channel.

Bridged Mono Mode

Bridged Mono Mode straps both amplifier channels together to make a very powerful, single-channel monaural amplifier. One channel "pushes" and the other "pulls" equally, doubling the power over that of channel alone. Signal is applied to the Channel A input only. Both attenuators are used to control signal level; in addition, both must be adjusted to the same setting. Only channel A input may be used.

Use extreme caution when operating the amplifier In Bridged Mono Mode. Never ground either side of the speaker cable when the amplifier is in Bridged Mono Mode; both sides are "hot." If an output patch panel is used, all connections must be isolated from each other and from the panel.

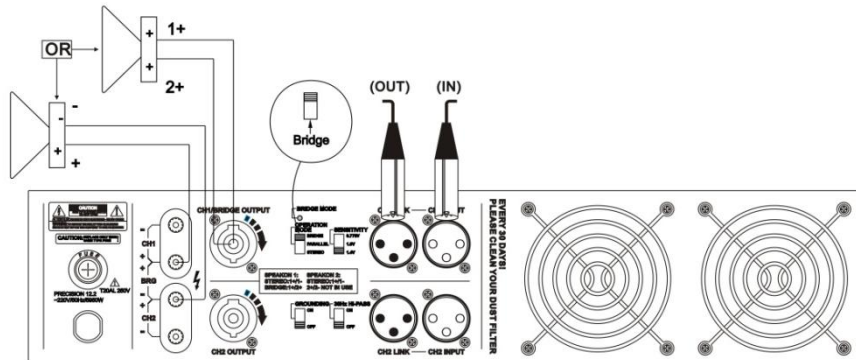


Fig. 6

Important!!!

Absolute minimum nominal load Impedance for bridge operation is:

TAS1100 and TAS4000: 8 Ohm.

TAS1500, TAS1900 and TAS2400: 4 Ohm.


Connecting amplifier outputs to oscilloscopes or other test equipment while the amplifier is in bridged mode may damage both the amplifier and test equipment!

Connection Cables


Take care of the connector cables, always holding them by the connectors and avoiding knots and twists when coiling them: This gives the advantage of increasing their life and reliability, which is always to your advantage.

Periodically check that your cables are in good condition, that they are correctly wired and that all their contacts are in good condition: a great number of problems (faulty contacts, ground hum, discharges, etc.) are caused entirely by using unsuitable or faulty cables.

Headphones

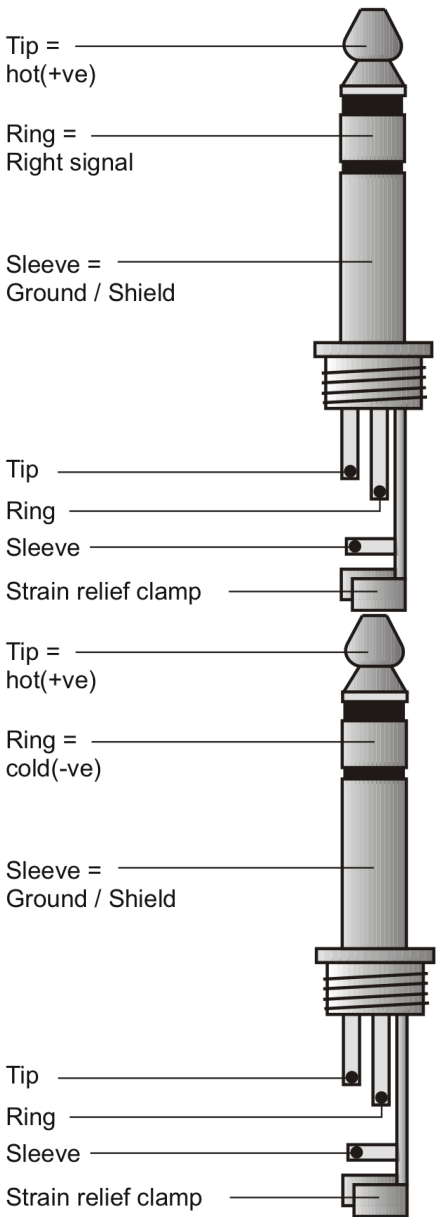


Unbalanced mono 1/4" jack plug

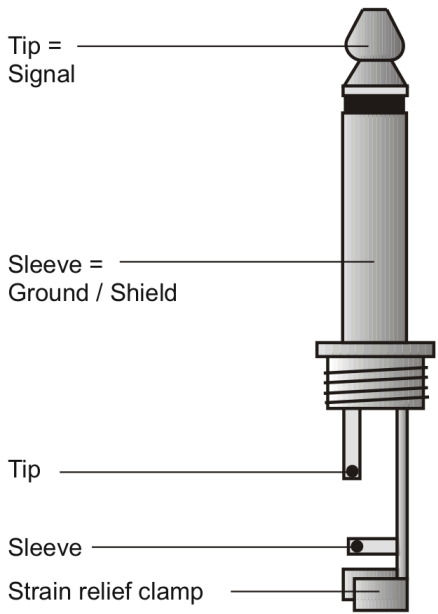


Balanced mono 1/4" jack plug

Compensation of interference with balanced connections

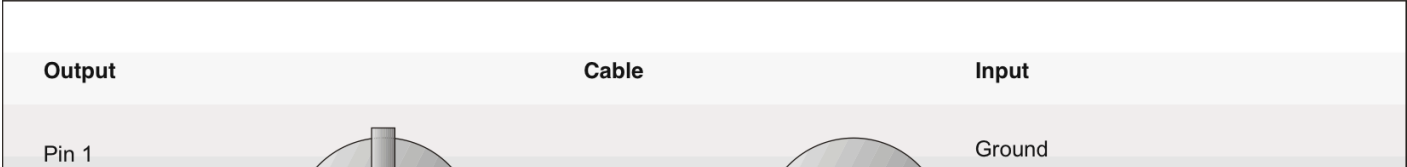

Balanced use with XLR connectors

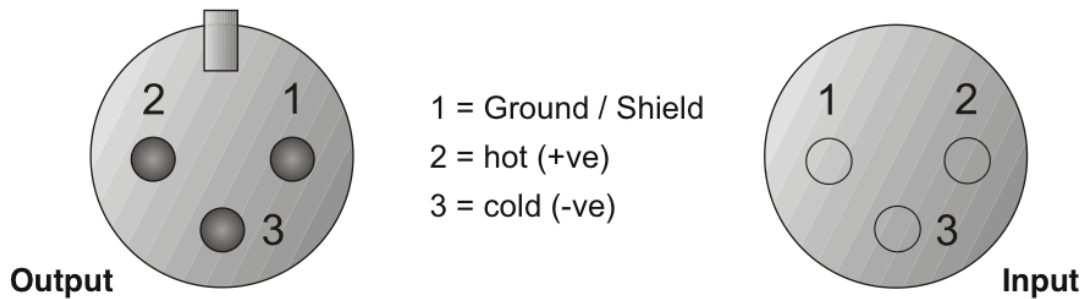

For unbalanced use PIN 1 and PIN 3 have to be bridged

Maintenance

The DAP Audio TAS requires almost no maintenance. However, you should keep the unit clean. Disconnect the mains power supply, and then wipe the cover with a damp cloth. Do not immerse in liquid. Do not use alcohol or solvents.

Keep connections clean. Disconnect electric power, and then wipe the DMX and audio connections with a damp cloth. Make sure connections are thoroughly dry before linking equipment or supplying electric power.

Replacing a Fuse

Power surges, short-circuit or inappropriate electrical power supply may cause a fuse to burn out. If the fuse burns out, the product will not function whatsoever. If this happens, follow the directions below to do so.

1. Unplug the unit from electric power source.
2. Insert a flat-head screwdriver into a slot in the fuse cover. Gently pry up the fuse cover. The fuse will come out.
3. Remove the broken fuse. If brown or unclear, it is burned out.
4. Insert the replacement fuse into the holder where the old fuse was. Reinsert the fuse cover.
Be sure to use a fuse of the same type and specification. See the product specification label for details.

Troubleshooting

DAP Audio TAS-series Amplifiers.

This troubleshooting guide is meant to help solve simple problems. If a problem occurs, carry out the steps below in sequence until a solution is found. Once the unit operates properly, do not carry out following steps.

1. If the device does not operate properly, unplug the device.
2. Check the fuse, power from the wall, all cables, etc.
3. If all of the above appears to be O.K., plug the unit in again.
4. If you are unable to determine the cause of the problem, do not open the amplifier, as this may damage the unit and the warranty will become void.
5. Return the amplifier to your Dap Audio dealer.

Product Specifications

Power	TAS-1100	TAS-1500	TAS-1900	TAS-2400	TAS-4000
Stereo, 2 ohms (per ch.)	-	1200Wrms	1500Wrms	1800Wrms	-
Stereo, 4 ohms (per ch.)	550Wrms	750Wrms	950Wrms	1200Wrms	2000Wrms
Stereo, 8 oms (per ch.)	300Wrms	450Wrms	580Wrms	700Wrms	1200Wrms
Bridge mono, 8 ohms	1100Wrms	1500Wrms	1900Wrms	2400Wrms	4000Wrms
Performance					
Frequency Response	20Hz - 20kHz				
THD + N	<0,05	<0,05	<0,05	<0,05	<0,05
Slew rate	20V/μs	20V/μs	20V/μs	20V/μs	20V/μs
Damping factor	>300	>300	>300	>300	>300
S/N Ratio	>80dB	>80dB	>80dB	>80dB	>80dB
Sensitivity	0,775mV / 1,0mV / 1,4mV				
Voltage gain	36,6dB	39dB	40dB	41,2dB	42dB
Input impedance	Balanced 20k/ unbalanced 10k				
Output circuit class	class AB	2 steps class H	3 steps class H	3 steps class H	3 steps class H
Hi-pass filter	30Hz				
Power supply	230V / 50-60Hz				
Weight	16,9Kg	17Kg	17,1Kg	17,15Kg	17,2Kg


Design and product specifications are subject to change without prior notice.



Website: www.Highlite.nl
Email: service@highlite.nl



TAS Block Diagram

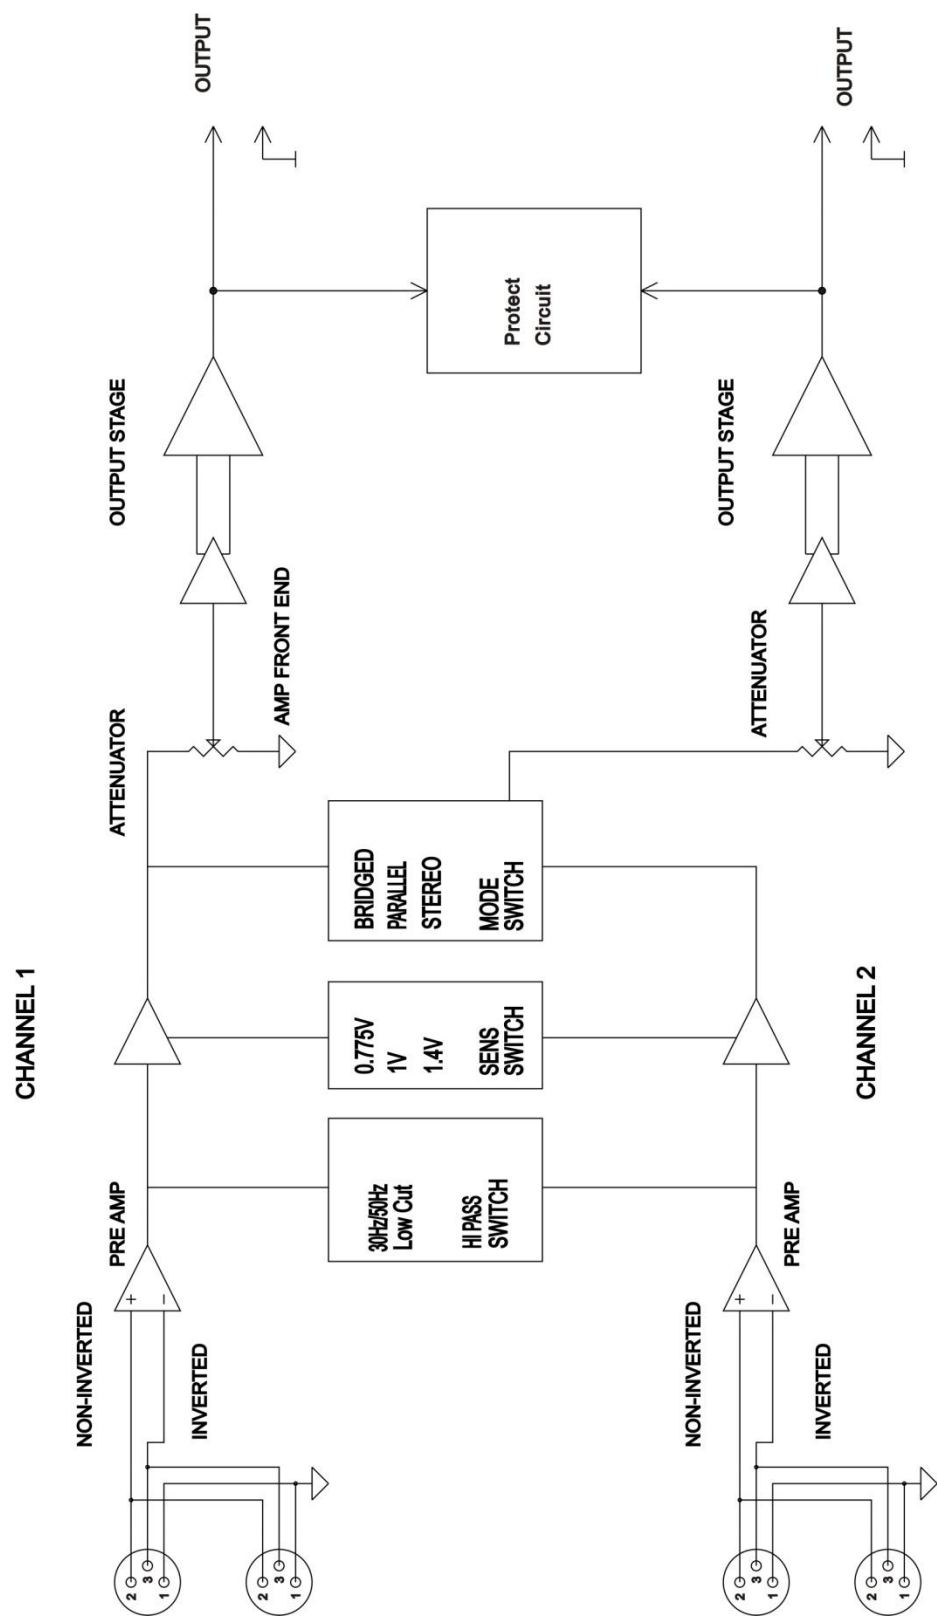

Wire Gauge Chart (Metric)

Stranded Cable Length (m)	Wire Gauge (mm ²)	Power Loss % (8 ohm load)	Power Loss % (4 ohm load)	Power Loss % (2 ohm load)
2	0,3	2,9	5,6	10,8
	0,5	1,74	3,4	6,7
	0,75	1,16	2,3	4,5
	1,5	0,58	1,16	2,3
	2,5	0,35	0,7	1,39
	4	0,22	0,44	0,87
5	0,5	4,3	8,2	15,5
	0,75	2,9	5,6	10,8
	1,5	1,45	2,9	5,6
	2,5	0,87	1,74	3,4
	4	0,55	1,09	2,2
	6	0,37	0,73	1,45
10	0,5	8,24	15,5	28
	0,75	5,6	10,8	19,9
	1,5	2,9	5,6	10,8
	2,5	1,74	2,9	6,7
	4	1,09	1,74	4,3
	6	0,73	1,09	2,9
30	0,75	15,5	0,73	45
	1,5	8,2	15,5	28
	2,5	5,1	9,8	18,2
	4	3,2	6,3	12
	6	2,2	4,3	8,2
	10	1,31	2,6	5,1

Wire Gauge Chart (AWG: American Wire Gauge)

Stranded Cable Length(ft)	Wire Gauge (AWG)	Power Loss % (8 ohm load)	Power Loss % (4 ohm load)	Power Loss % (2 ohm load)
5	18	0.81	1.61	3.2
	16	0.51	1.02	2
	14	0.32	0.64	1.28
	12	0.2	0.4	0.8
	10	0.128	0.25	0.51
10	18	1.61	3.2	6.2
	16	1.02	2	4
	14	0.64	1.28	2.5
	12	0.4	0.8	1.6
	10	0.25	0.51	1.01
40	18	6.2	11.9	22
	16	4	7.7	14.6
	14	2.5	5	9.6
	12	1.6	3.2	6.2
	10	1.01	2	4
	8	0.6	1.2	2.4
80	18	11.9	22	37
	16	7.7	14.6	26
	14	5	9.6	17.8
	12	3.2	6.2	11.8
	10	2	4	7.7
	8	1.2	2.4	4.7



© 2007 DapAudio.